









## **Belldinni DIY Friendly**

Ready to be installed like a pre-hung  
door kit with Easy Installation kit


QR code to have EZ installation  
instructions on your phone



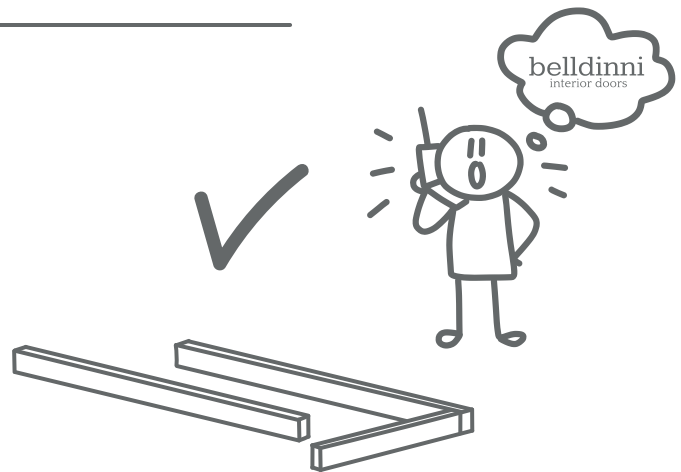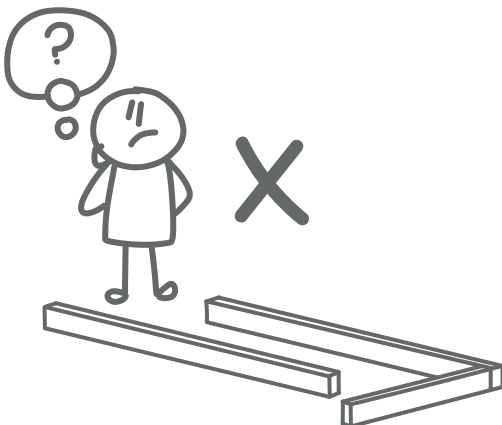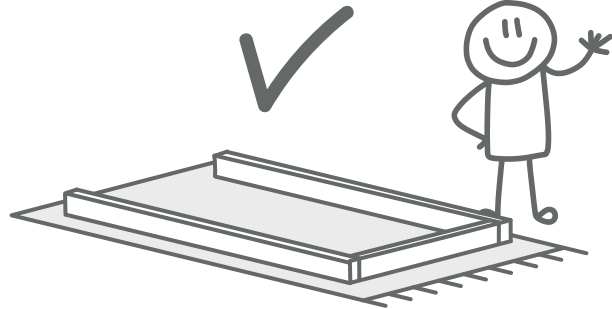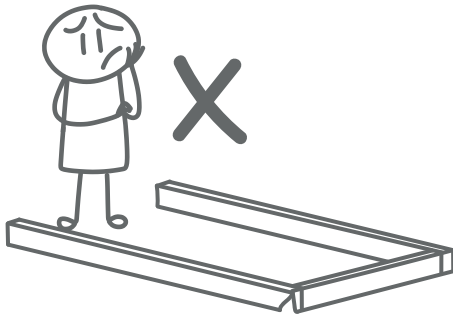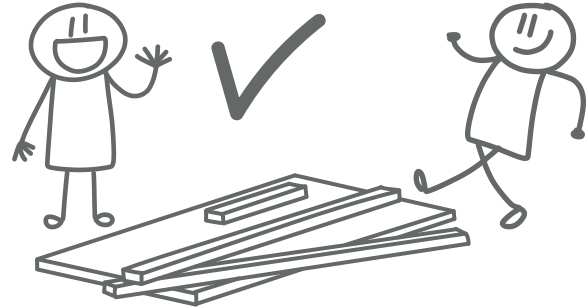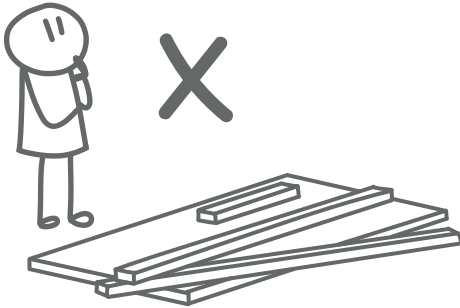

## NECESSARY TOOLS

Not included

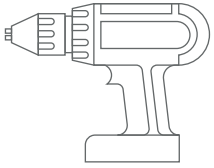

Screwdriver



Screw 1 5/8"



Pencil



Tape measure



Garbage bags



Level




Shims  
(not included)




Safety glasses

## DOOR PARTS


(some fixtures may not be included)

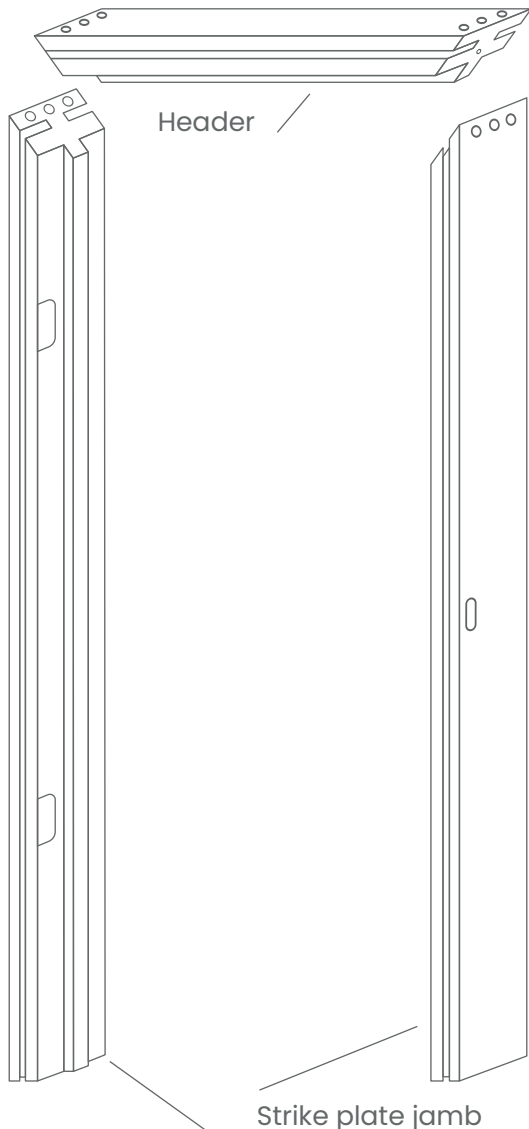

Header

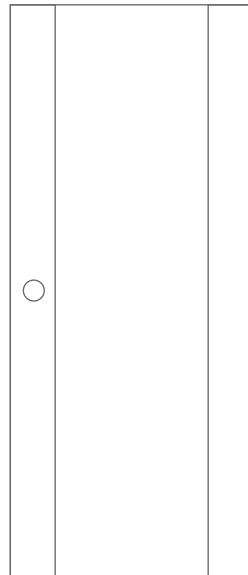

Door slab is already  
predrilled for hinges  
and a handle.



Screw inside  
white connector 4 pcs



**C**  
Black 4 pcs.  
opposite connector




**F**  
Screw 6 pcs.




**G**  
Screw 18 pcs.



**D**  
Dowel 2 pcs

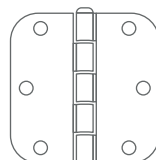

Qty depends on the height  
of the door (2 or 3 pcs).  
Hinge type can vary

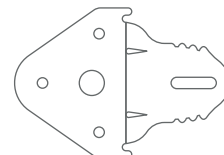

**E**  
Quick hanger 6 pcs  
(may not be included)

Hinges side jamb

Strike plate jamb



Do not use standard  
nails and hammer



Do not step  
on the door



Do not lay down  
on edges



Do not lean  
on the wall

## WARNING!

Please do not throw away the packing  
cardboard until the end of the installation

## STEP 1.

### Check your order

Check the contents of your door unit according to the door parts description above (page 3)


If you have any problems or questions please contact us via [diy@belldinni.com](mailto:diy@belldinni.com) or by phone # 646 680 3191

Measure rough opening to make sure all sizes are correct:

Door slab should be at least 2" narrower than the opening width, we recommend the door slab to be 2,5" narrower than the opening width.  
Door slab should be at least 2" shorter than the opening height.


Check swing directions according to the chart below

inside

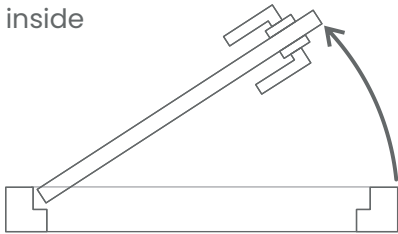

outside

**Left hand inswing**

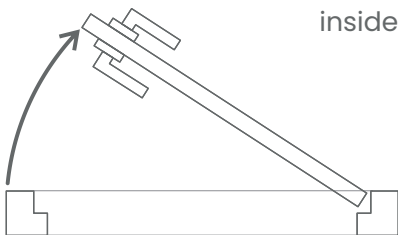


outside

**Right hand inswing**





## STEP 2.

Connect the door frame

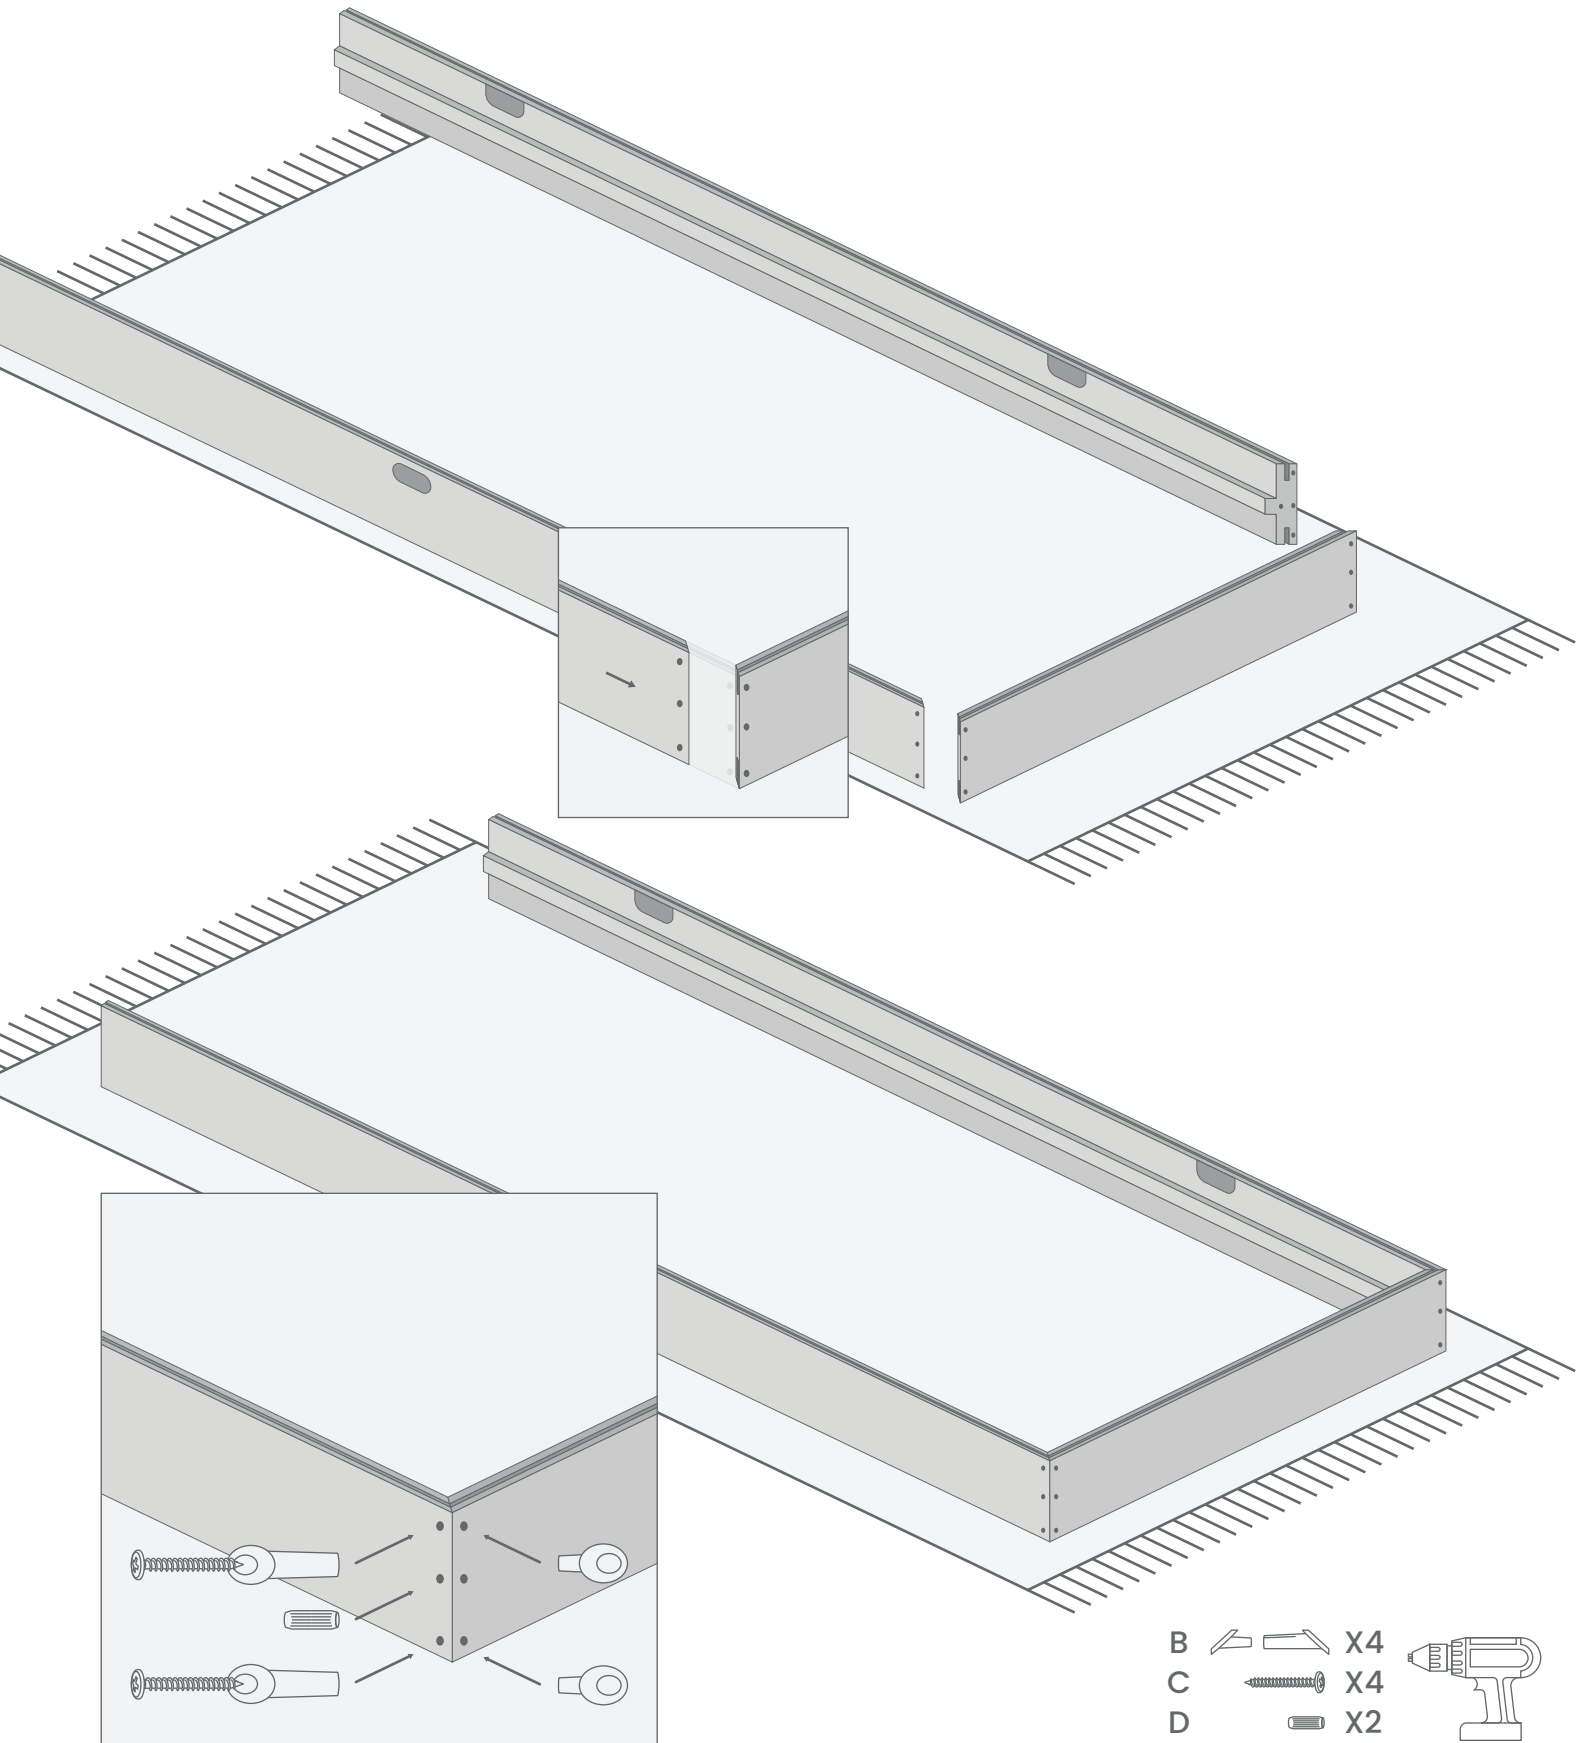


## STEP 3.

Attach ez hangers

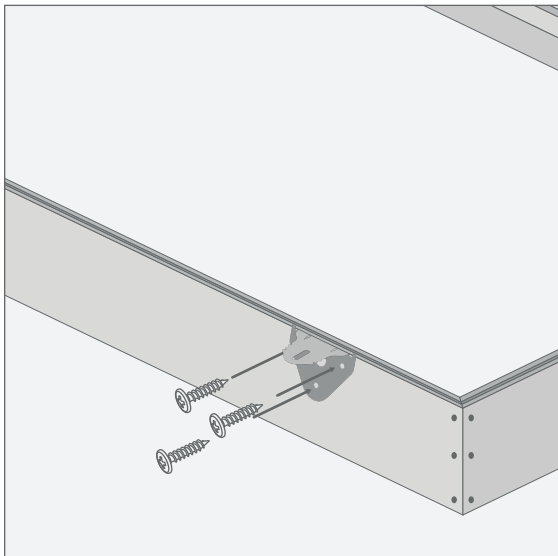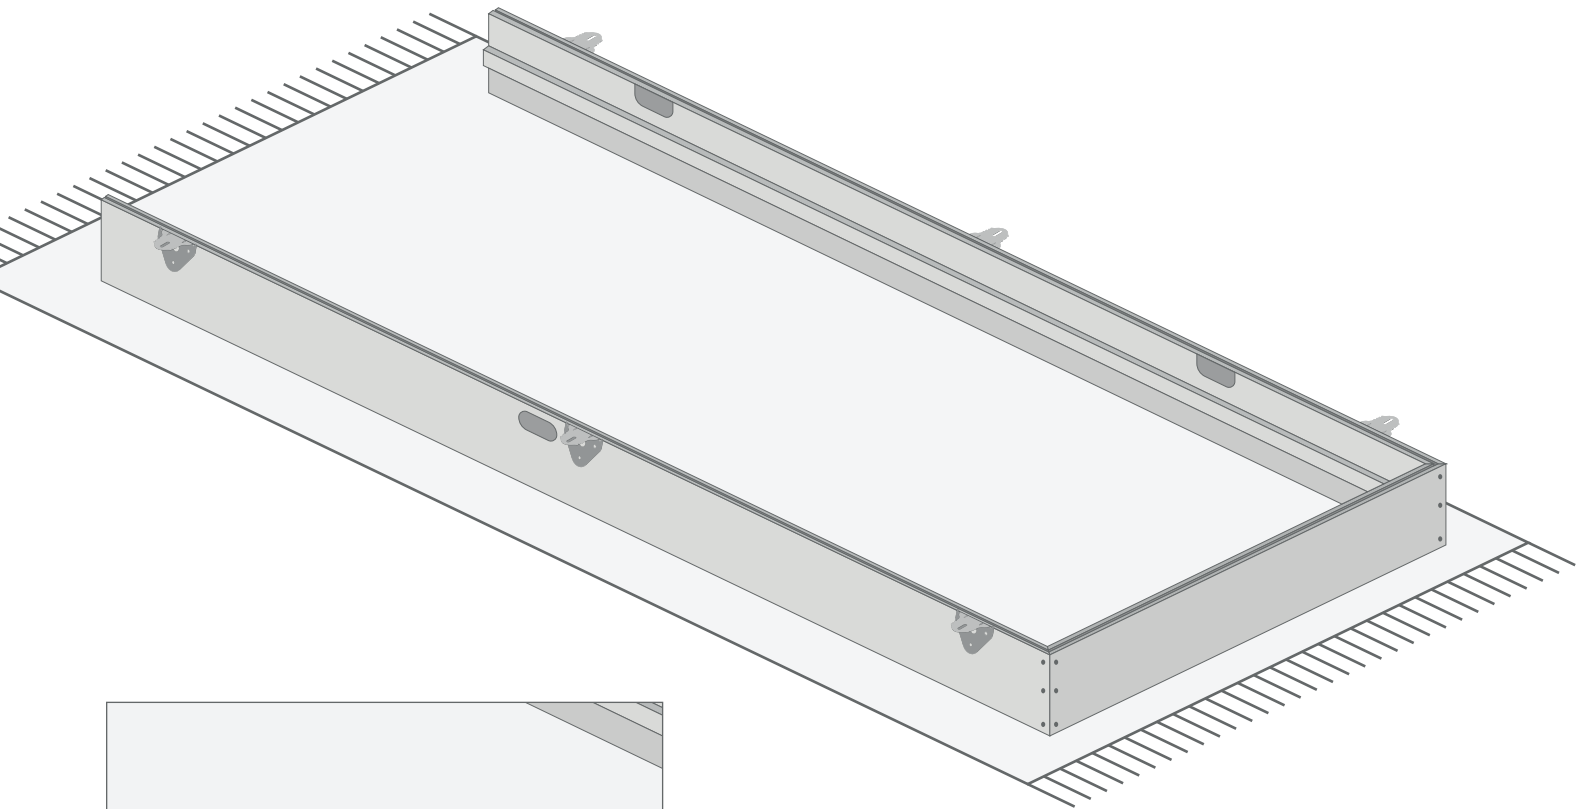


G  X18

E  X6

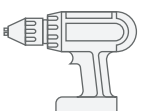


## STEP 4.

Lay out the markings

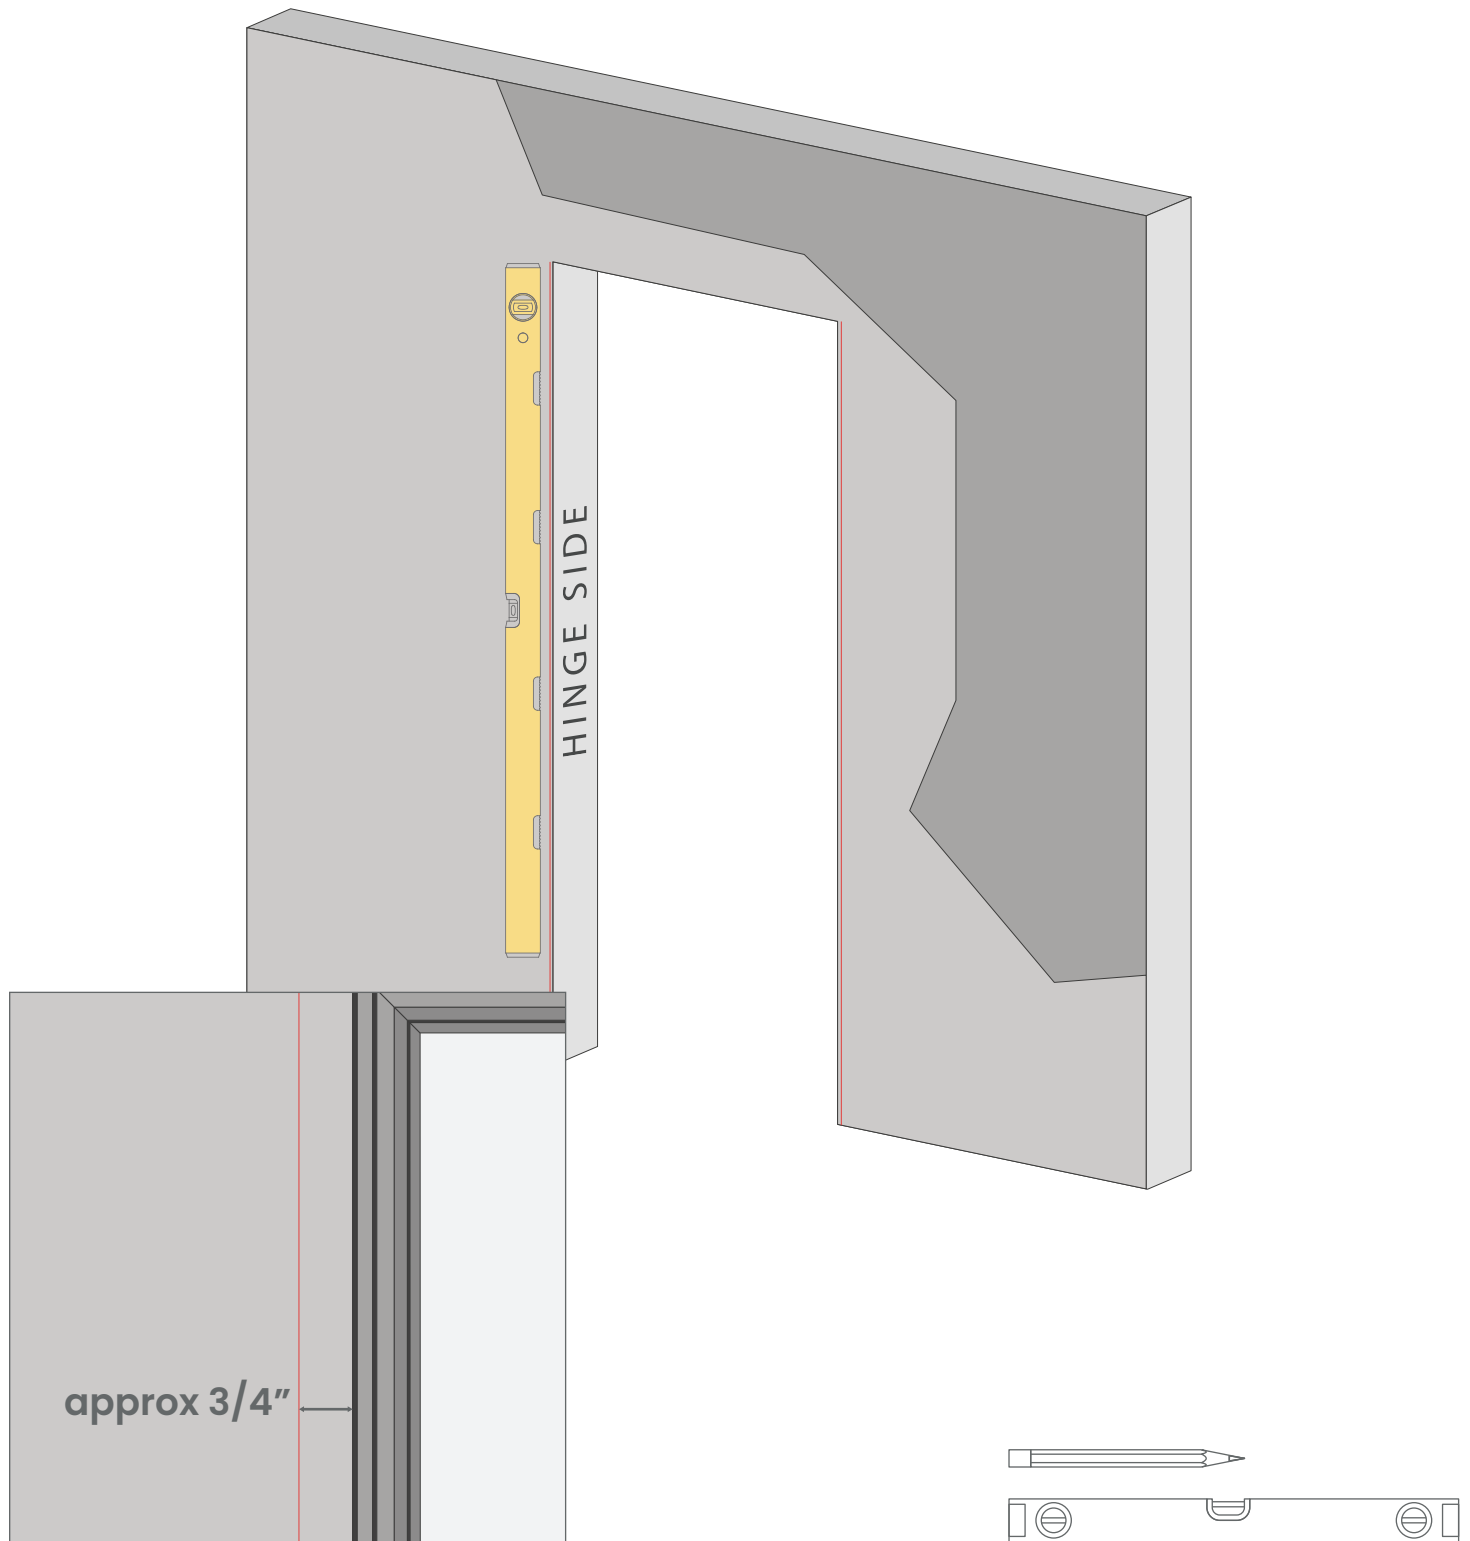


## STEP 5.

Install the door frame

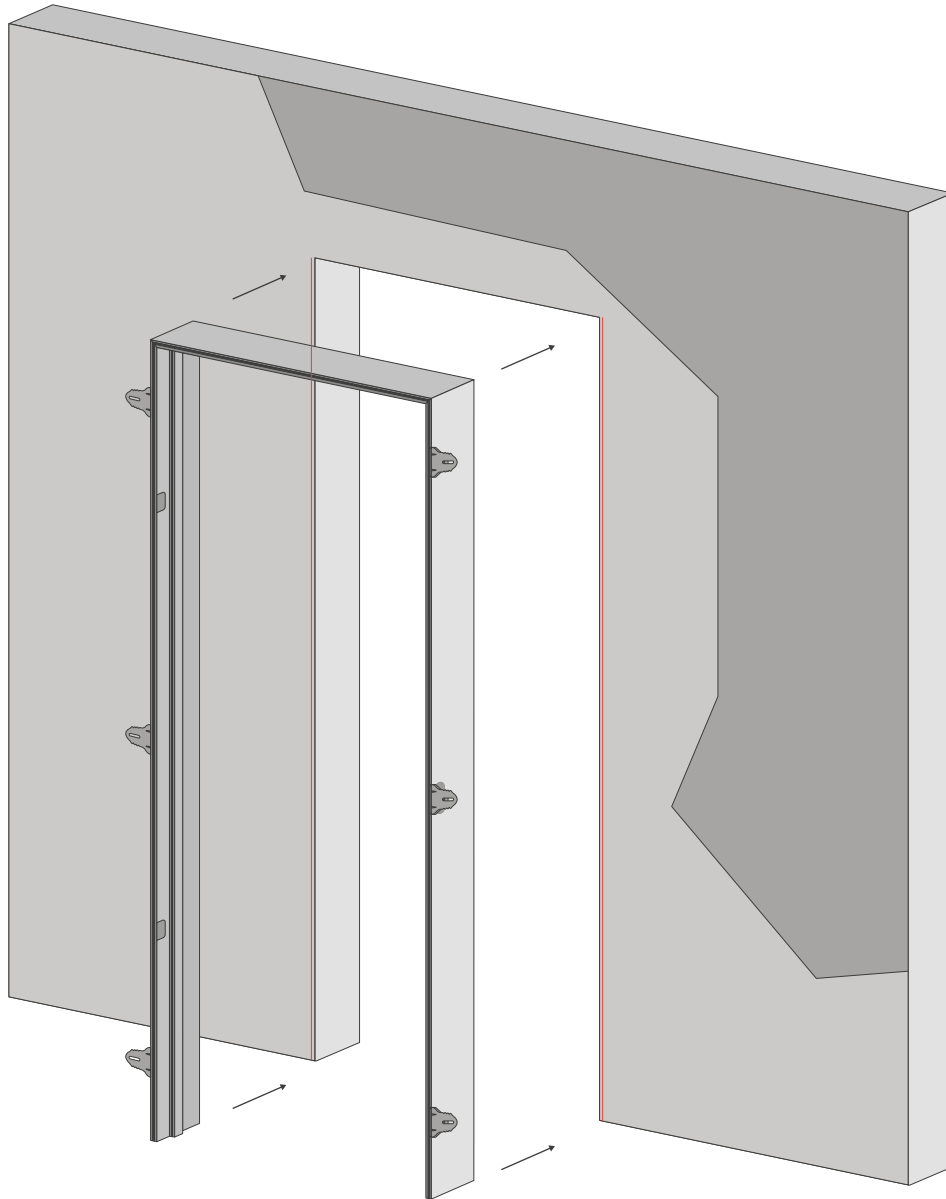

## STEP 6.

Align and screw in the door frame

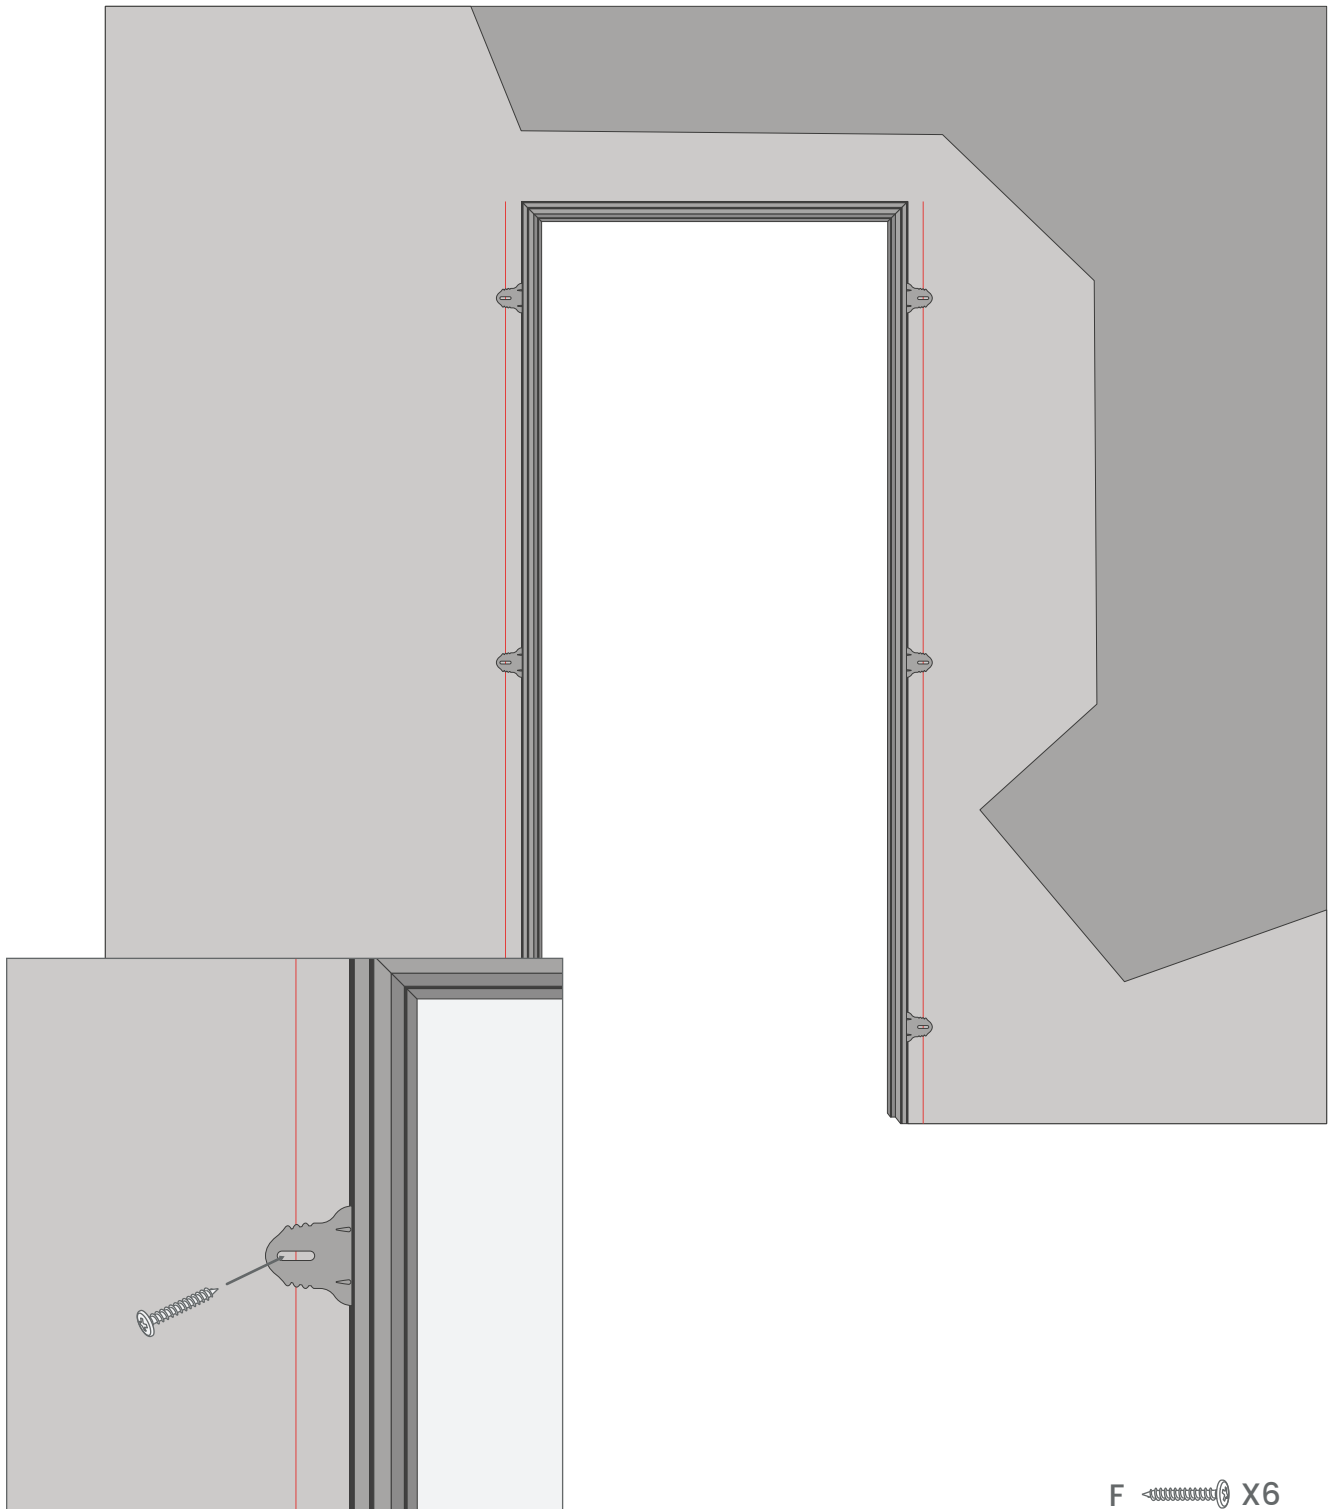


F  X6





## STEP 7.

Screw the hinges to the door slab

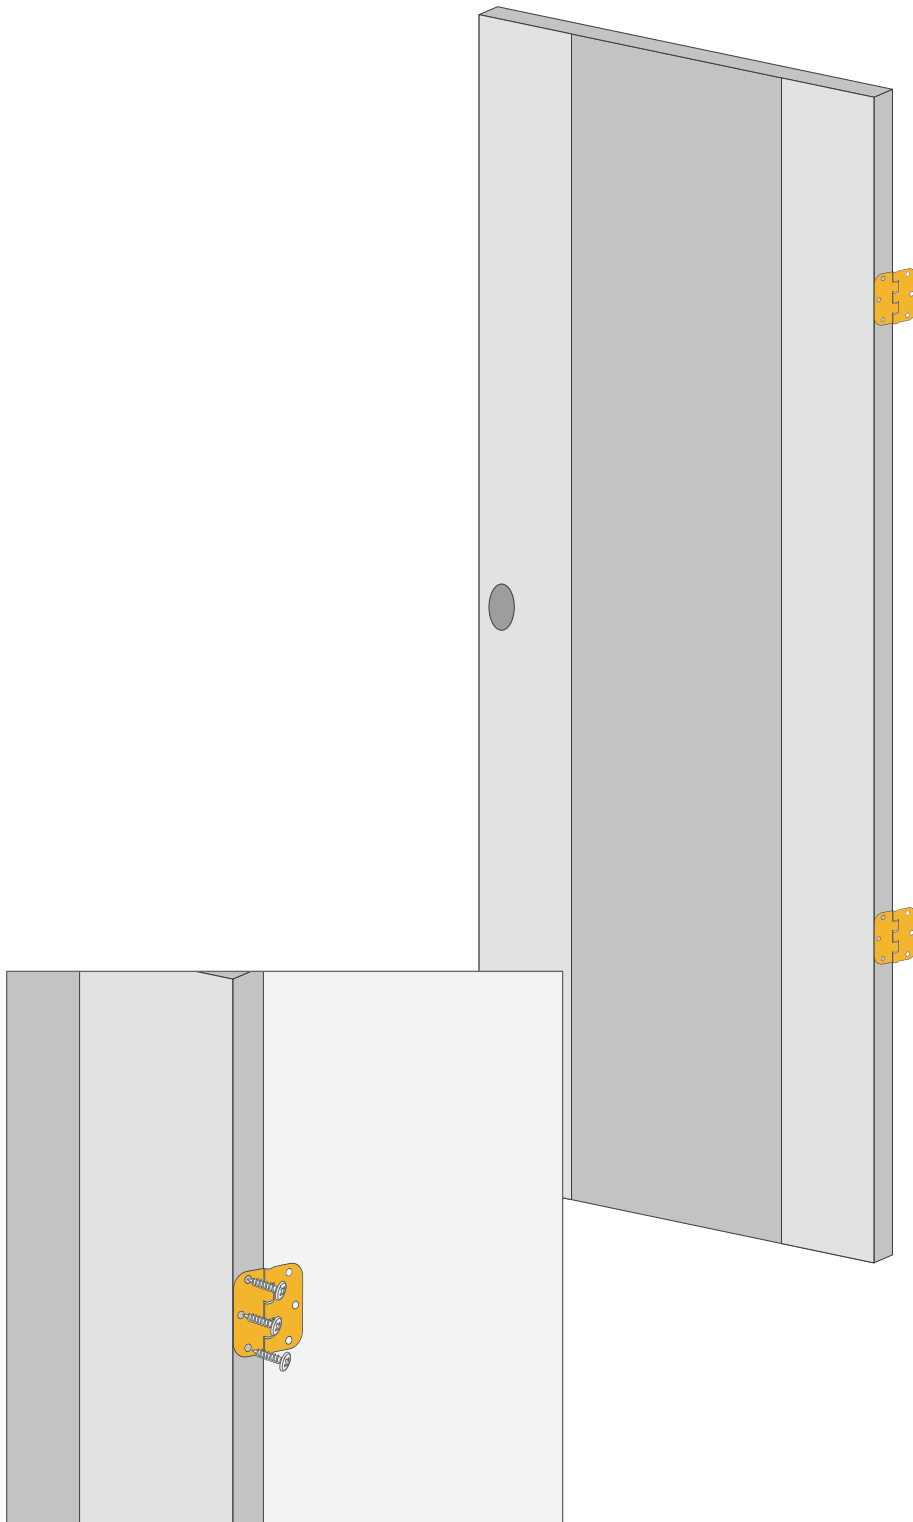


x2

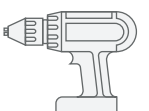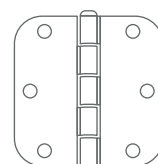


## STEP 8.

Screw on the door hinges

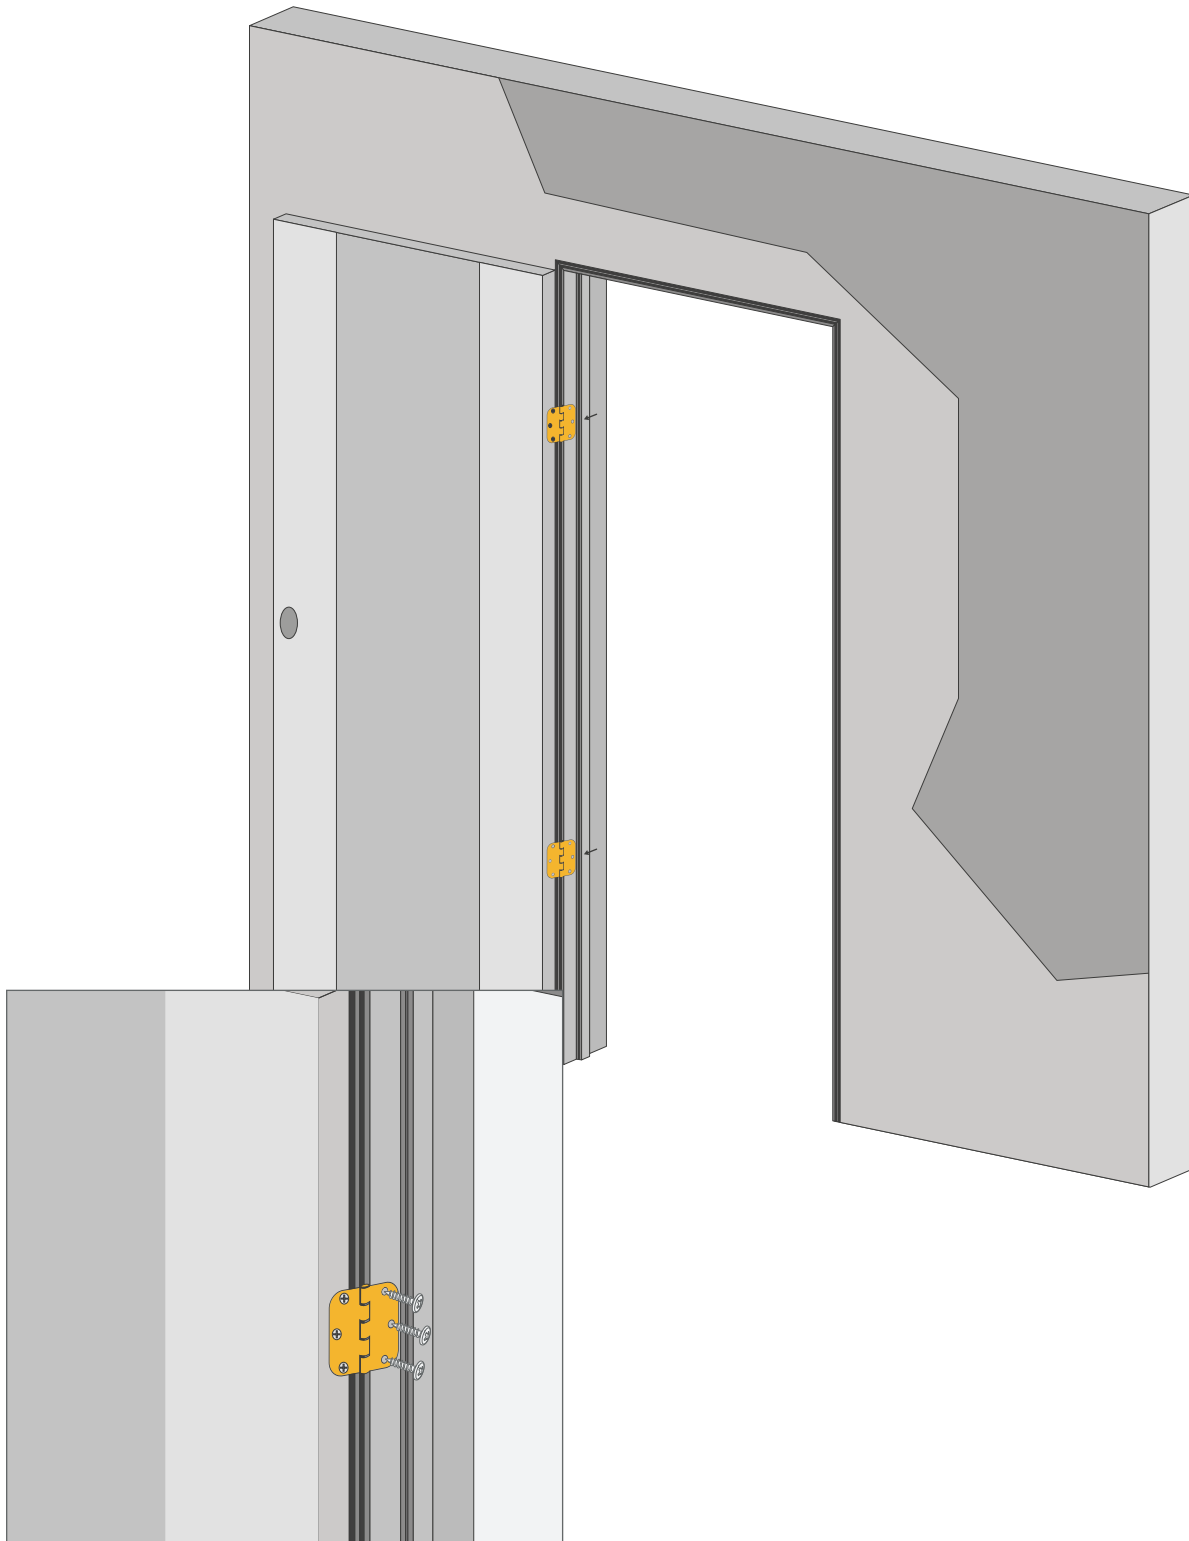

## STEP 9.


Install the door slab

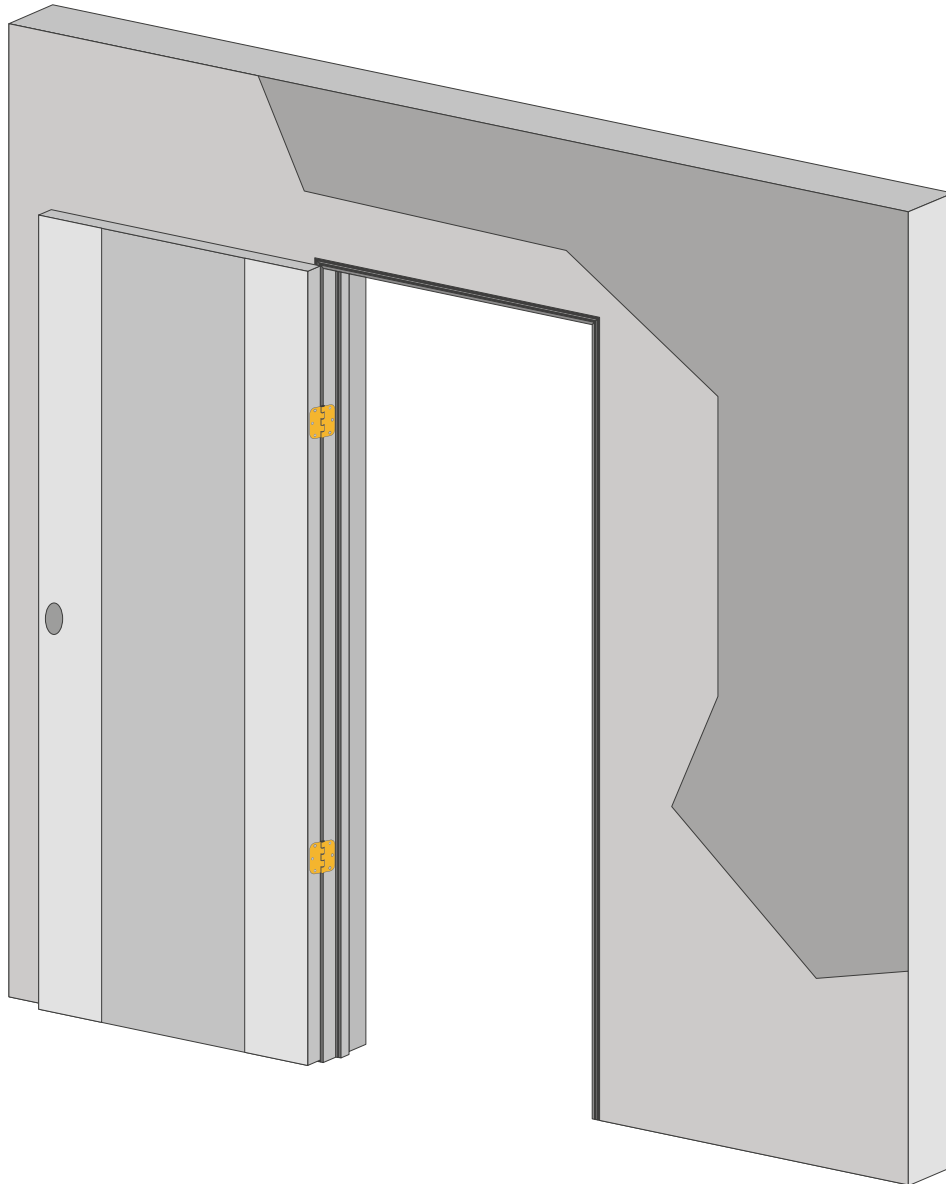



## STEP 10.

### Adjustment and installation

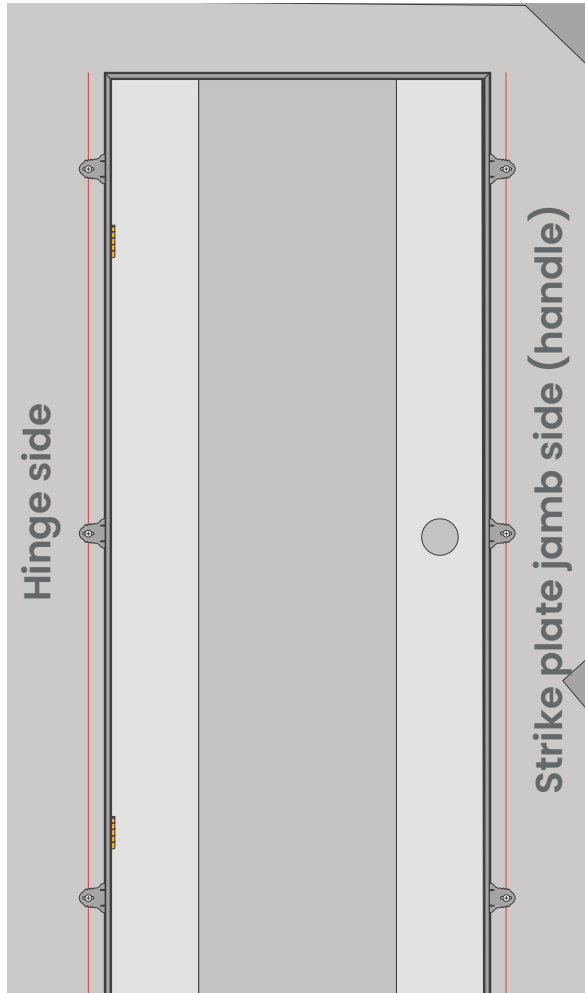

Check and adjust the hinge side of the jamb according to the level first.

Fix the hinge side jamb to the wall with the help of EZ hangers, "A" screws (1 5/8") (not included) and shims (not included) if needed.


Unscrew the screws of the strike plate side (handle side) of the jamb.

Align the door slab within door jamb (frame) minding the gaps between the door slab and the door jamb.

Hinge side of the jamb is already fixed to the wall, so the strike plate side of the jamb and the header jamb need to be adjusted.


Please note, metal EZ Hangers have the ability to be bent. In some installation cases you would need to bend them during the door installation to be as close as possible to the best installation result.

Fix the strike plate side (handle side) of the jamb and the header jamb to the wall with the help of EZ Hangers, "A" screws (1 5/8") (not included) and shims (not included) if needed.

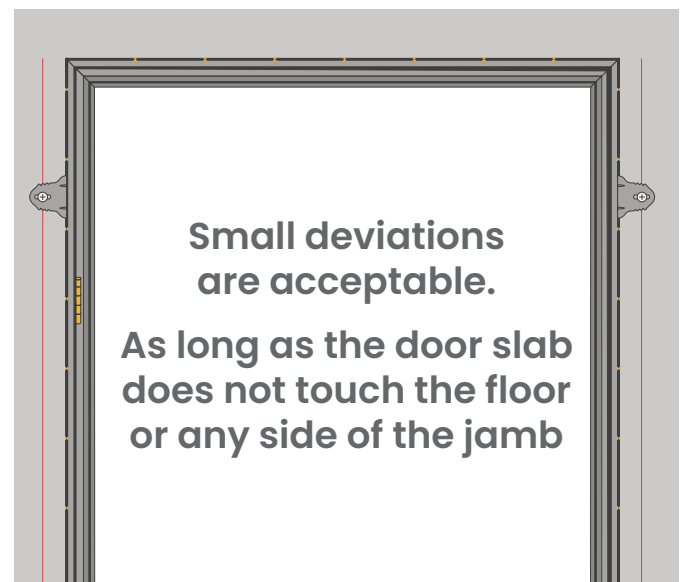

## STEP 11.

Moldings installation

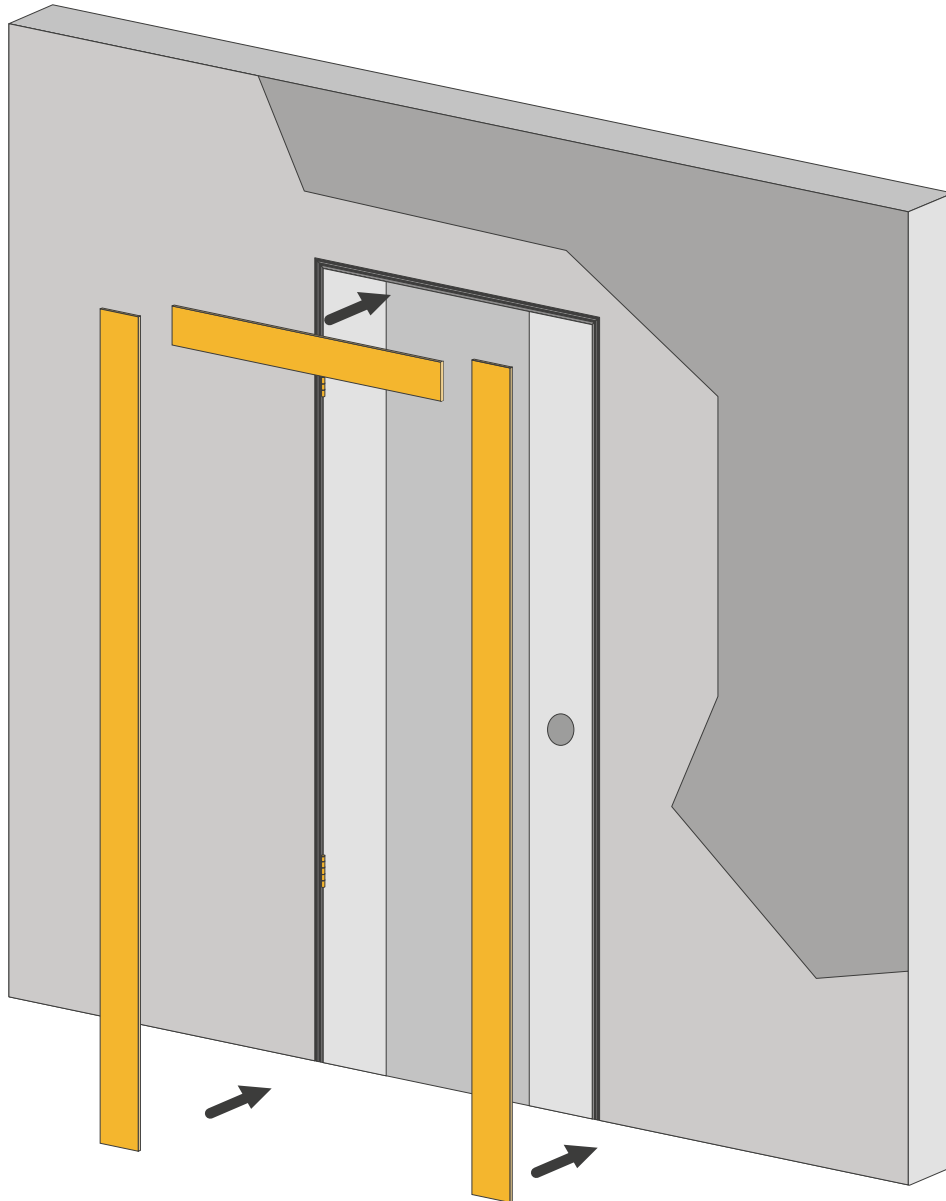

## STEP 12.

It's done

