



DOOR HANDLE INSTALLATION MANUAL

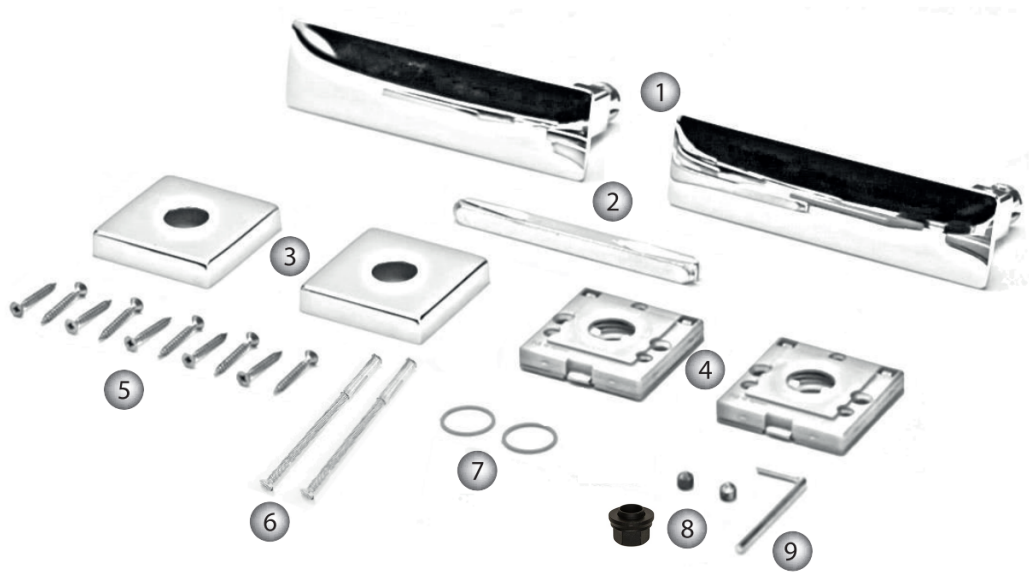


- 1.Handles
- 2.Pin
- 3.Cover plate
- 4.Rosette
- 5.Screws
- 6.Tie screws
- 7.Plastic rings
- 8.Centering sleeve
- 9.Allen key


- 1.1 Install the lock and insert the pin with the groove down (A)
- 1.2 Place rosette with ledge down . (B)

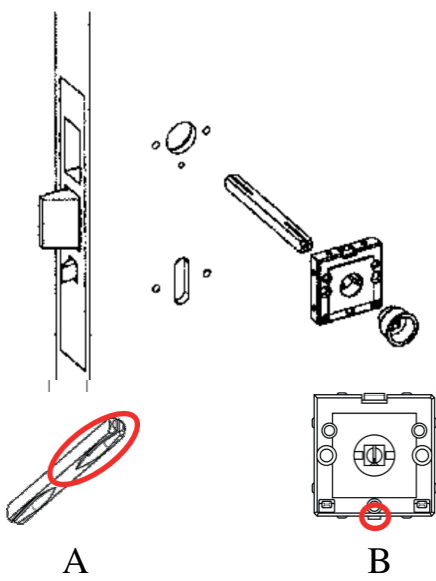

- 2.Secure the rosette with provided screws

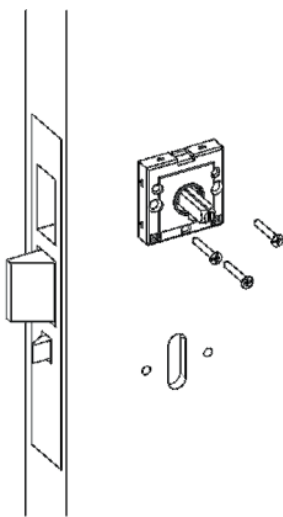


- 3.Secure with tie screws

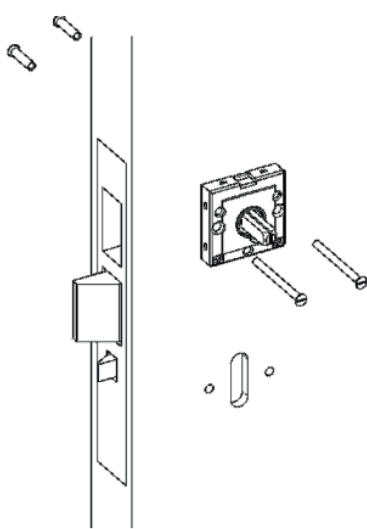


ATTENTION - When using a drill, set the speed on minimum to avoid damaging the rosette.


- 4. Take out the centering sleeve and pot on the cover plate

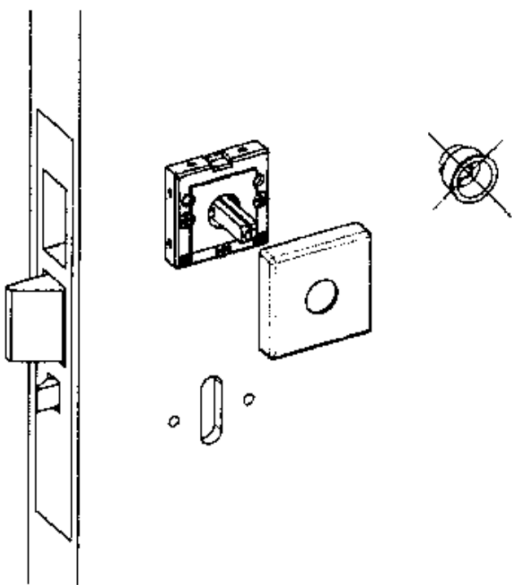


- 5. Put on a plastic ring and handle on the pin, secure using allen key.

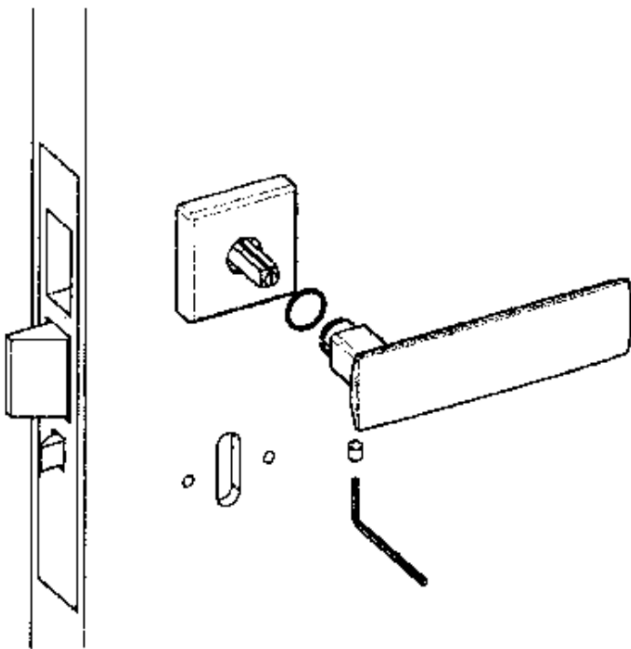

- 6. If needed place Keyed Rosette and secure with 2 screws provided.
- Install keyed cover plate on top of the rosette

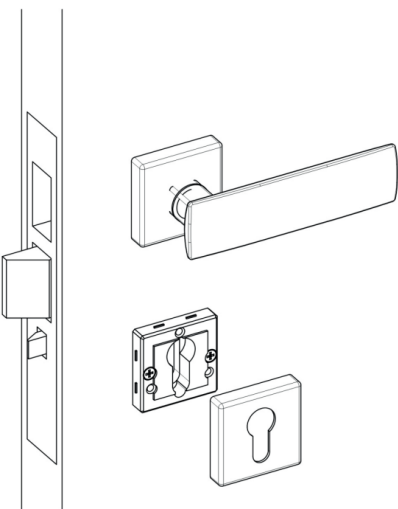

- 7. If needed place Privacy Rosette using the pin and centering sleeve secure with 2 screws provided. Take out the centering sleeve
- Install Privacy cover plate on top of the rosette

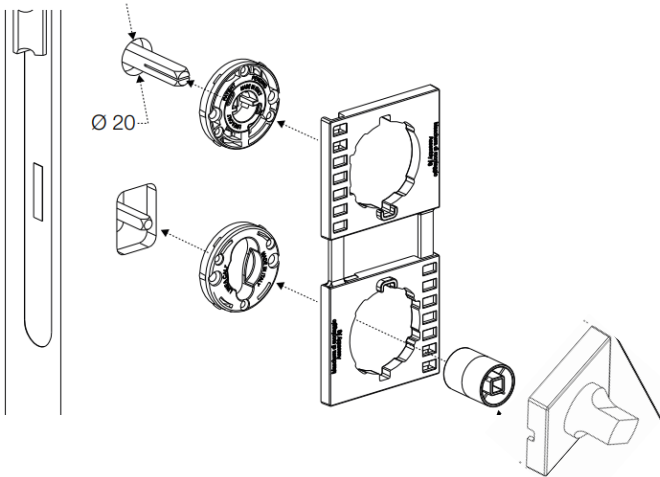

CONTACTS
(848) 456-7050

WORKING HOURS
Call center:
Mon - Fri: 8:30am - 5:00pm.
Sat - Sun: Closed
Showroom:
484 Route 17, Paramus, NJ 07652
Sun - Mon: Closed
Tue - Fri: 9:30am - 6:30pm
Sat: 10am - 5pm